



CORESEAL™ INSERT SYSTEM INSTALLATION GUIDE

www.commercialbathrepair.com

ADDITIONAL TOOLS NEEDED (NOT SUPPLIED)

J-Roller* (sold separately)
2-inch Masking Tape
Sander with 60 grit sandpaper
Hand sandpaper

Paper towels
Acetone or Lacquer Thinner
Razor knife
Trash can



**IMPORTANT: WORK AREA SHOULD BE WELL VENTILATED.
WEAR MASK OR RESPIRATOR IF SENSITIVE TO SMELLS.
AVOID CONTACT OF ADHESIVE WITH EYES.**


Step 1: Clean entire tub or shower floor bottom with solvent. Dry completely.



Step 2: Dry fit the insert on the bottom to ensure a proper fit




Step 3: Put 2 rows of 2" masking take around the edges of the unit and over the drain.

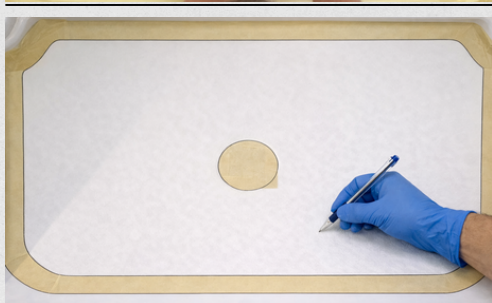

Step 4: Dry fit the insert once again (you can use double-sided tape to keep it in place) and trace around the edge of the insert with a pen



Step 5: Use a razor knife to cut completely through the line you drew around the entire perimeter and drain cutout.

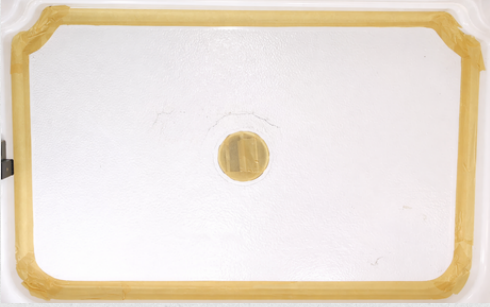

Step 6: Remove the insert. Remove the inner row of tape to reveal a working area the same shape as your insert template.



Step 7: Sand the bottom of the unit, inside the taped area, with an orbital palm sander and 60-grit paper.

IMPORTANT: IF THE UNIT HAS BEEN REFINISHED OR COATED, IT IS ESSENTIAL TO REMOVE IT ALL BEFORE INSTALLATION



Step 8: Vacuum up all debris and give the bottom another thorough clean with solvent. Allow the unit to dry completely.




Step 9: Make sure you are wearing your gloves. Empty all of Part A and all of Part B into the mixing bucket using the stir stick. (1:1 ratio) Mix thoroughly for approx. 1 minute.



Step 10: Apply the mixed adhesive to the bottom of the unit and spread evenly across the entire prepped working area using the provided spreader. (Approx 1/8" thick coating)



Step 11: Carefully place the insert on top of the adhesive and adjust it to its desired location. Press down all over.

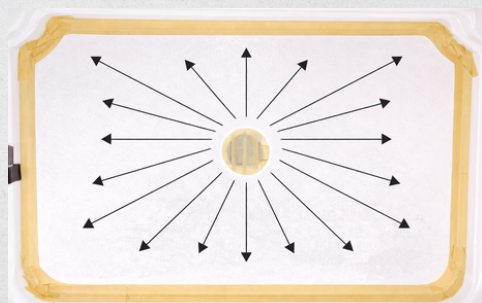

Step 12: Using the J-Roller, roll on top of the insert, starting at the center and out toward the edges, like in a pie shape, all the way around. Do this a couple times.

NOTE:

YOU SHOULD HAVE A SOLID BEAD OF ADHESIVE COMING OUT THE EDGE OF THE INLAY, ONTO THE TAPE. BE CAREFUL NOT TO PICK UP ADHESIVE ON THE ROLLER DURING THIS STEP.



Step 13: Push away excess adhesive away from insert, using a clean putty knife or other flat edge. Wipe clean between pulls.



Step 14: Carefully remove masking tape from around insert.



Step 15: Give one final roll to ensure strong surface to surface contact.



Step 16: Wipe edges clean and give a final clean to the entire insert to remove any remaining adhesive.

Congratulations, your CORESEAL Insert installation is complete. Please contact us with any questions at (561) 264-7076.